



ELECTRIC STRIKE DIMENSIONS

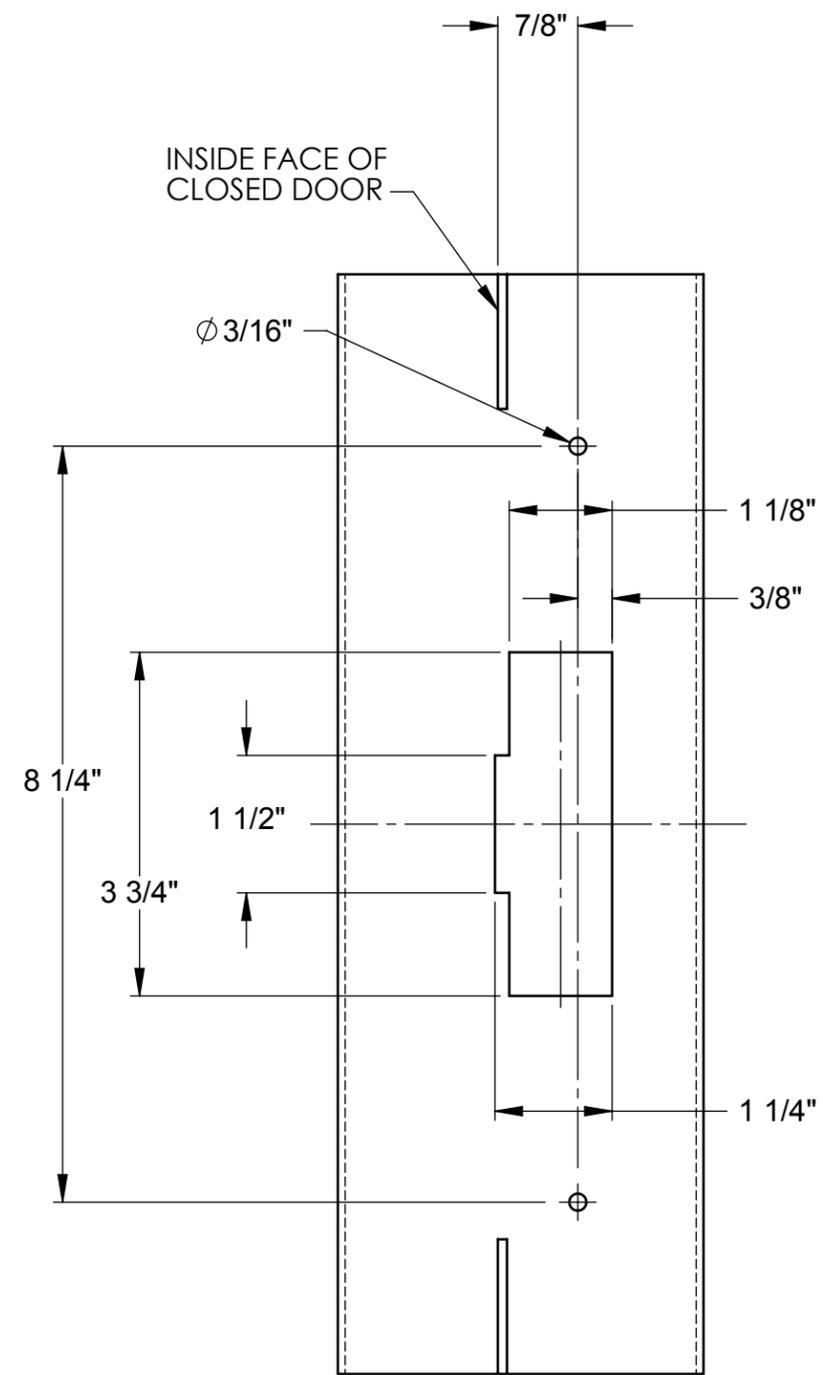

JAMB PREPARATION

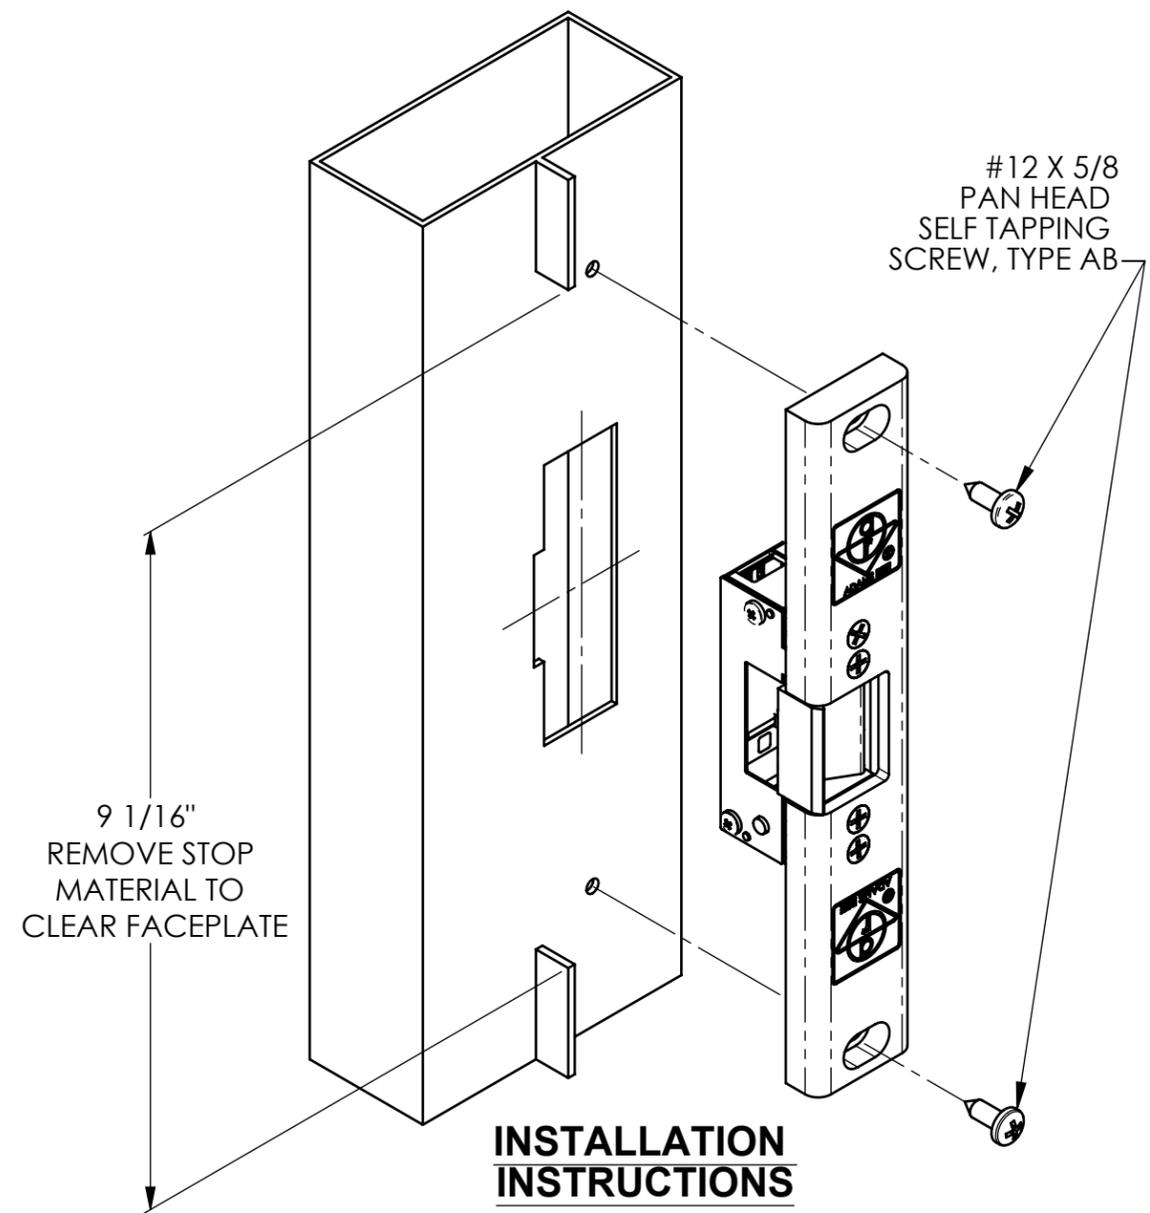

INSTALLATION INSTRUCTIONS

1. PREPARE DOOR JAMB PER DRAWING.
2. USING WIRE NUTS PROVIDED, CONNECT WIRES FROM SOLENOID TO THE WIRES COMING FROM THE LOW VOLTAGE SIDE OF THE TRANSFORMER.
3. INSERT ELECTRIC STRIKE INTO JAMB. ATTACH WITH TWO (2) #12 SCREWS.

PAGE 2 OF 2 IS 80-0180-381 REV. H.

Notes:

Fail-Secure Operation - Unlocks when energized. If power fails the strike remains in a locked condition.

Fail-Safe Operation - Locks when energized. Used in applications requiring automatic unlocking in case of power failure.

Available Voltages: 12V AC Intermittent duty, 12V AC/DC Continuous duty, 16V AC Intermittent duty, 16V AC/DC Continuous duty, 24V AC Intermittent duty, 24V AC/DC Continuous duty.

Warning !

AC Intermittent duty solenoids are designed to be energized 30 seconds at a time. Energizing for longer periods will damage the solenoid.

AC Continuous duty strikes are supplied with a A/R # 4603 rectifier attached to the solenoid leads. These are silent operation strikes - without the "buzzing" sound. They use a DC solenoid with an externally attached, full-wave bridge rectifier.

Wiring

The number of wires will vary depending on features of the strike. The voltage and amperage ratings are marked on all strike labels. The solenoid wires are not polarized.

Monitoring (Optional)

Monitored strikes contain two, internally mounted, switches: one is activated by the latch bolt's penetration of the strike and the other indicates that the strike jaw is either locked or unlocked by the solenoid.

All unused leads from monitor switches should be insulated.

Common contact -Black
 Normally open contact (NO) -White
 Normally closed contact (NC) -Red
 Maximum switching current -7 Amps @ 250 VAC


Warning !

Intermittent duty solenoids should not be converted to fail-safe configuration. Fail-safe units use only continuous duty solenoids.

Solenoid Data


24 VDC CONT.	WHITE STRIPE ON BLACK	141.6	.170	.170	4.09	4.09
16 VDC CONT.	GREEN STRIPE ON BLACK	61.8	.222	.222	3.05	3.05
12 VDC CONT.	RED STRIPE ON BLACK	34.6	.332	.332	3.81	3.81
24 VAC INT.			.744	.431	19.15	6.43
16 VAC INT.	BLUE STRIPE ON BLACK	16.3	1.030	.636	17.30	6.60
12 VAC INT.	YELLOW STRIPE ON BLACK	8.8	1.420	.813	17.74	5.82
DESCRIPTION	WIRE COLOR	COIL RESISTANCE (OHMS ±5%)	PEAK INSTANTANEOUS CURRENT (AMPS)	CONTINUOUS OR HOLD CURRENT (AMPS)	PEAK INSTANTANEOUS POWER (WATTS)	CONTINUOUS OR HOLD POWER (WATTS)

Control Switch (N.O.)
 (ex. Pushbutton, keypad, Card Reader)
DRY CONTACTS!

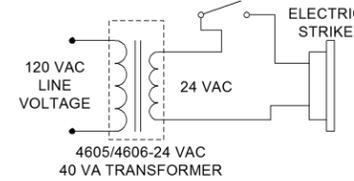


TYPICAL ELECTRIC STRIKE WIRING DIAGRAM INTERMITTENT DUTY FAIL-SECURE 24 VAC

Control Switch (N.O.)
 (ex. Pushbutton, keypad, Card Reader)
DRY CONTACTS!

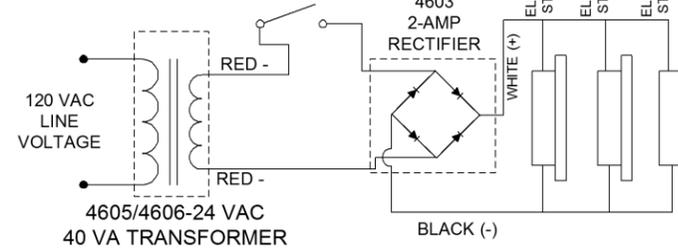


TYPICAL ELECTRIC STRIKE WIRING DIAGRAM INTERMITTENT/CONTINUOUS DUTY 24 VDC


WIRE CODING (MONITORED VERSION)

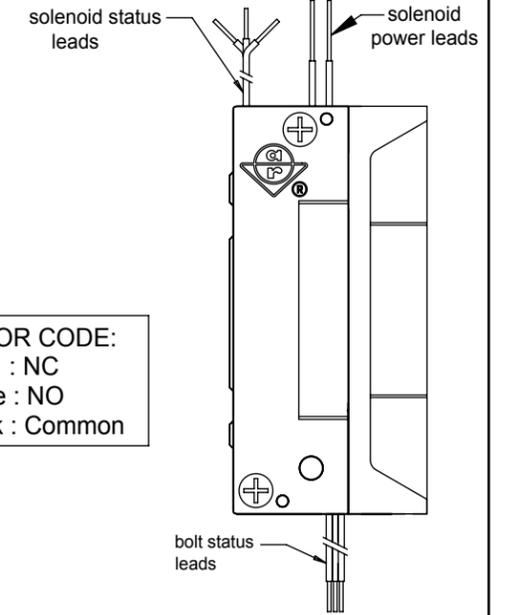


FIELD REVERSIBLE (FAIL-SECURE)

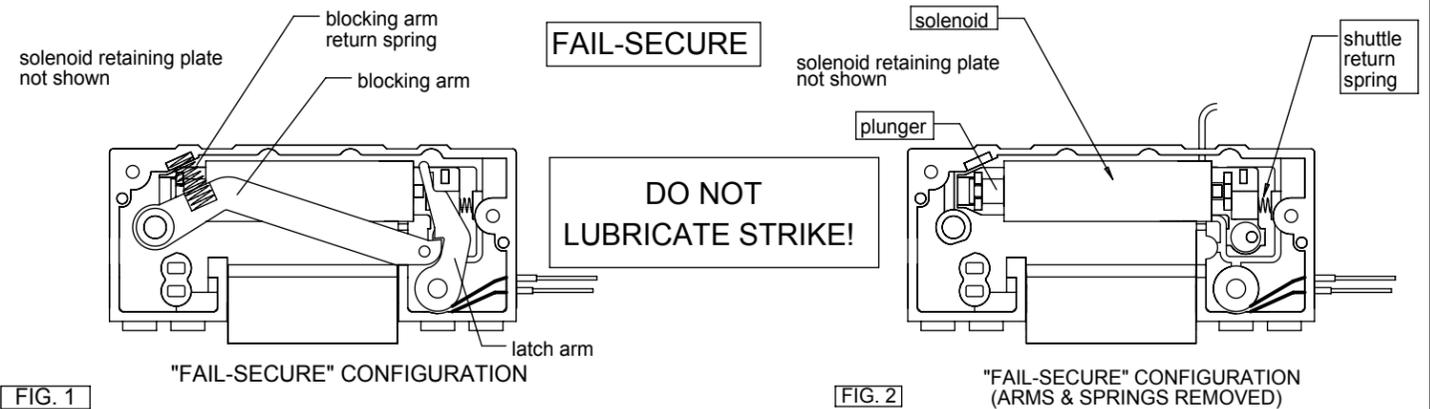


FIELD REVERSIBLE (FAIL-SAFE)

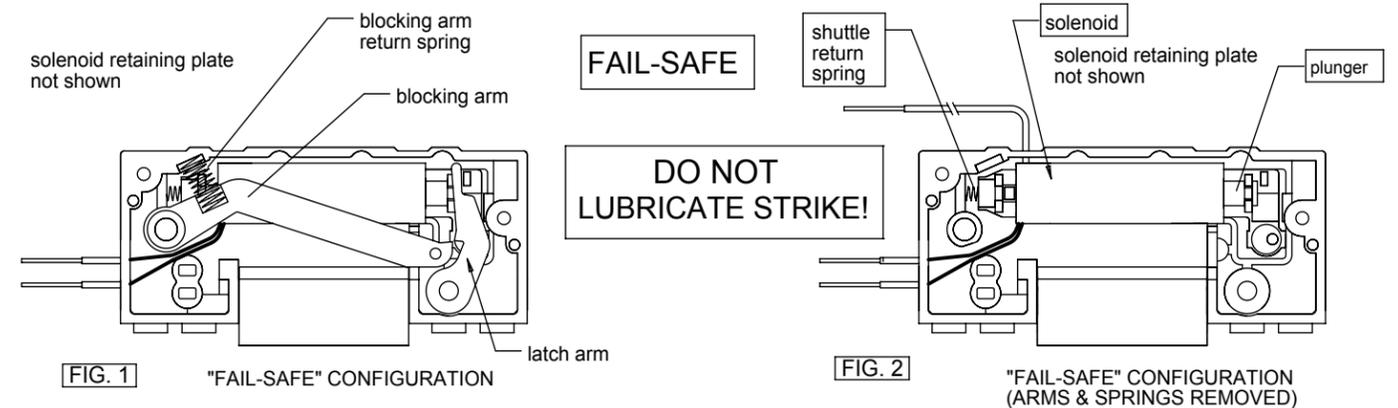

JAMB PREPARATION

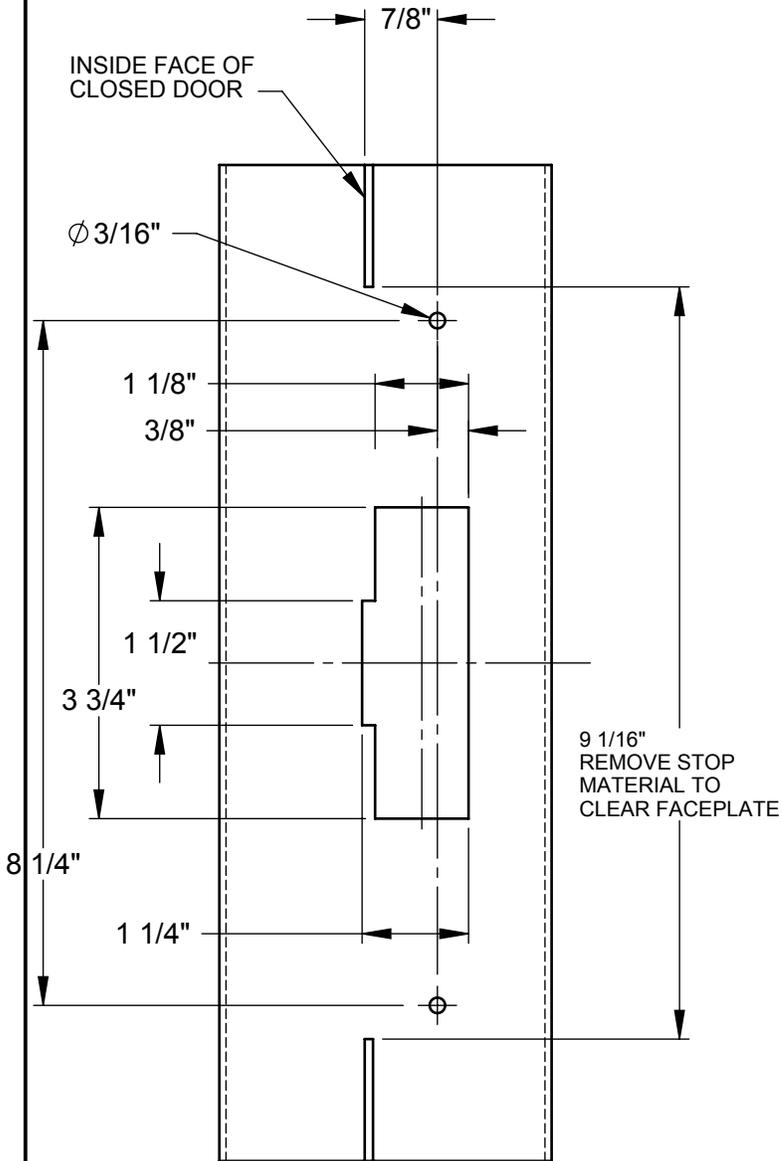

ELECTRIC STRIKE DIMENSIONS

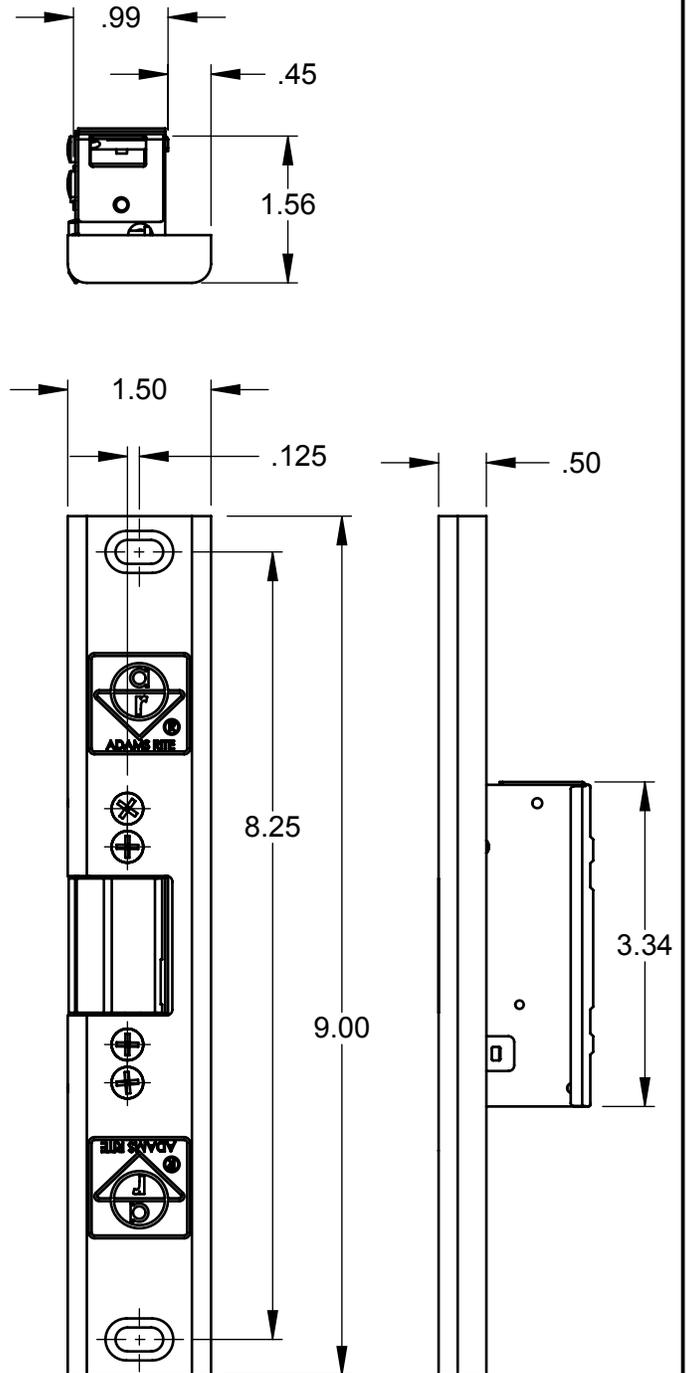

www.adamsrite.com
Phone: 800-626-7590
800-872-3267

Fax: 866-582-4641
800-232-7329

71R2 ELECTRIC STRIKE
FOR METAL JAMB

INSTALLATION INSTRUCTIONS

Page 3 of 3

ASSA ABLOY

80-0180-385 Rev. C

Ecn 11955D Appvd: MP Date: 07/20/12